 





Grout Groovy!

ASSEMBLY GUIDE AND USER MANUAL


3 STEP QUICK ASSEMBLY - GO TO WWW.GROUTGROOVY.COM FOR HOW-TO VIDEOS.

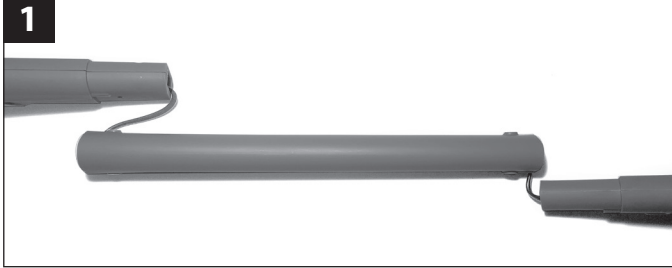

 1) Handle Assembly – insert the 3 handle pieces into each other – be sure to push the wire into the handle slots. Pull any excess cord through from plug. Use the screws provided to complete the assembly.

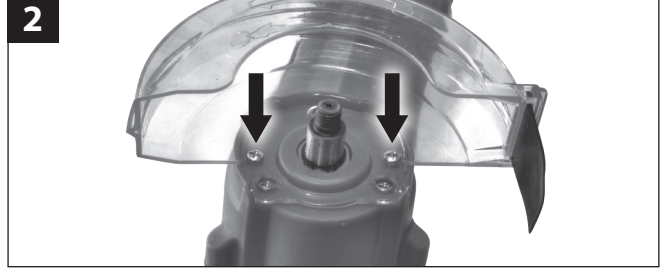

 2) Cleaning Brush Guide Assembly – align the guide with the 2 holes in the motor hub – insert the provided screws into the holes and secure the guide.

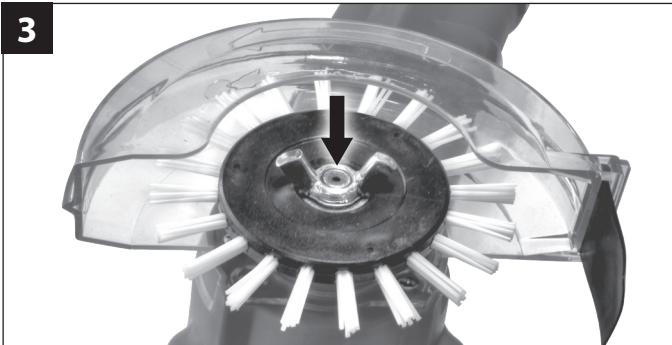

3) Brush Wheel Assembly – insert cleaning brush wheel onto the motor shaft as shown – use the wing nut provided to secure the brush wheel. There's a hole in the motor shaft behind the brush wheel that you can insert a small screw driver if you need to tighten the wing nut.



**NEED HELP?
GO TO:
GroutGroovy.com
for assembly &
how-to videos.**

7 STEP QUICK START - HOW TO USE

- 1) Mix hot water with your favorite liquid grout cleaning solution** into a spray bottle, apply to grout lines, then let it work into the grout for 5 to 10 mins before using the machine. Removes dirt when used properly. ***DOES NOT REMOVE STAINS OR DISCOLORATION!***
- 2) Plug Grout Groovy** into a 120v power source

- 3) Depress the operating handle** on the top of the machine
- 4) As the cleaning brush rotates**, let it rotate and scrub the grout line and move it back and forth until dirt is removed (keep hands and feet away from rotating brush)
- 5) There is no need to apply pressure** – the spinning wheel does all of the work to clean grout

- (when a small area is cleaned release the operating handle until the cleaning brush stops rotating)
- 6) Mop up and dry** the small area that has been cleaned before moving to another area – (do not stand in water while using the machine)
- 7) Use a small grout brush** for areas close to cabinets, walls and appliances to complete the cleaning process

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following: **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

WARNING – To reduce the risk of fire, electric shock, or injury:

- a)** Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- b)** Do not use outdoors
- c)** Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- d)** Use only as described in this manual. Use only manufacturer's recommended attachments.
- e)** Unplug before connecting brush.
- f)** Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- g)** Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- h)** Do not handle plug or appliance with wet hands.
- i)** Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- j)** Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- k)** Turn off all controls before unplugging.
- l)** Use extra care when cleaning on stairs.
- m)** Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- n)** To Reduce the Risk of Fire, do not use a flammable or combustible liquid to clean a floor.
- o)** This appliance is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.
- p)** Do not use with damaged cord or plug. If appliance is not working as it should, has beendropped, damaged, left outdoors, or dropped into water, return it to a service center.
- q)** Do not use with an extension cord.

SAVE THESE INSTRUCTIONS.

SERVICING OF DOUBLE-INSULATED APPLIANCES

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated

appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace. To reduce the risk of electric shock, this appliance has a

polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

NEED HELP? GO TO WWW.GROUTGROOVY.COM FOR ASSEMBLY & HOW-TO VIDEOS.